


KAS Platinum Lock Installation Diagram

1.

Cut door - perfect vertical backset alignment is important for correct fitting
Install latch - loosely fit latch to allow adjustment room
Place Front lock body inside door - correctly align spindle, snib and screw sleeves

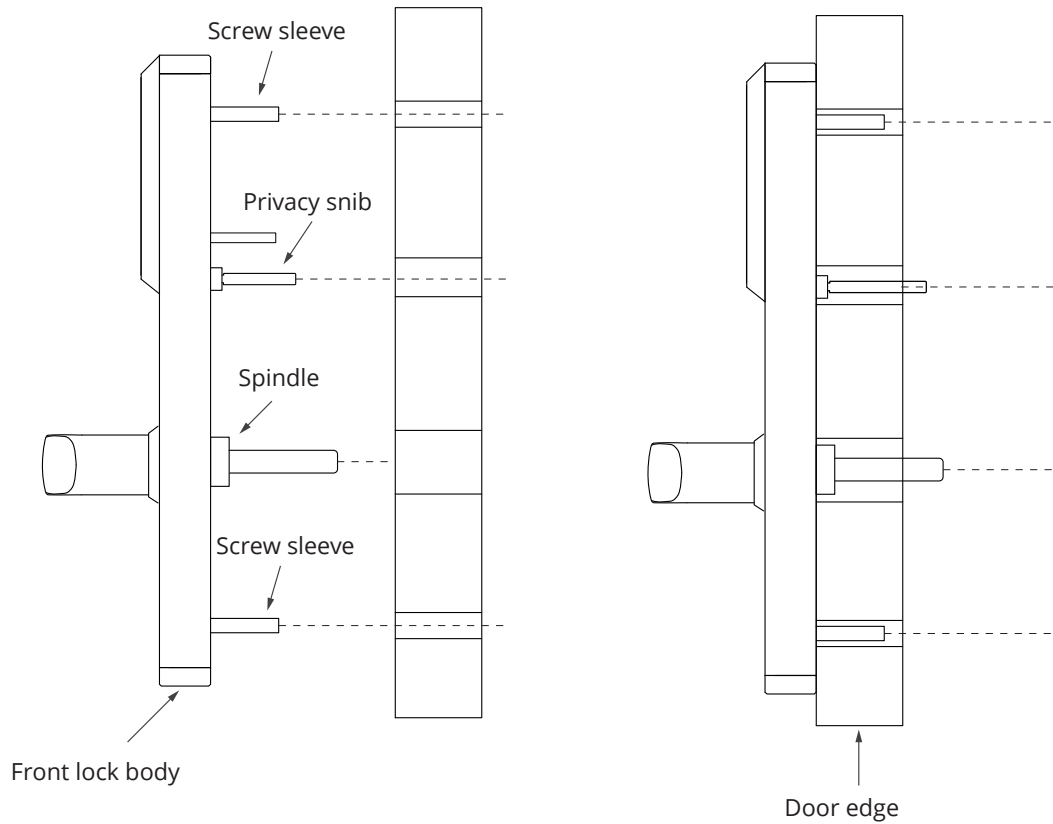

2.

Place Rear handle and fix with 2 screws into screw sleeves
Test all functions and handle operations before closing the door.
Incorrect installation alignment may lead to damaged hardware.
COMPLETED HARDWARE INSTALL

